





INSTALL INSTRUCTIONS FOR 10-1018



BEFORE YOU START

REQUIRED TOOLS

Please read the entire product guide before proceeding Flathead Screwdriver

Ensure all parts are present.

Mallet/Hammer

If you are missing any parts, please call or text us at (909)-675-1313

Do not work on your vehicle while the underbody components are hot.


16mm Deep Socket

12" Driver Extension

Ratchet

Make sure the vehicle is in park or the parking brake is set if you plan on working on the ground. If working on a lift, make sure the vehicle is lifted safely and securely.



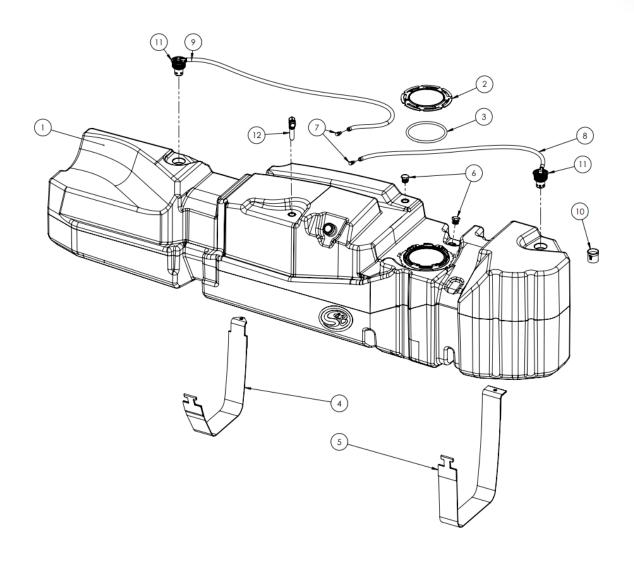

ITEM NO.	PART NUMBER	DESCRIPTION	
1	10-1018	HIGH CAPACITY REPLACEMENT FUEL TANK	1
2	TI1083-00	RETAINING/LOCKING RING	1
3	TI1094C-00	O-RING, BUNA-N 50 DURO, 50mm CS	1
4	TI1098-00	Front Strap for 10-1007	1
5	TI1099-00	Rear Strap for 10-1007	1
6	TI1125-00	1/2"NPT PLUG	2
7	TI1141-00	VENT-BREATHER	2
8	TI1149-40	5/16" ID FUEL HOSE, 40"	1
9	TI1149-50	5/16" ID FUEL HOSE, 50"	1
10	TI1175-00	ICV, IN FILL PIPE	1
11	TI1226-00	OE STYLE ROLLOVER VENT VALVE	2
12	TI1288-00	BARBED VENT FITTING 90° ELBOW W/STRAW	


STEP 1

Loosen the hose clamp on the filler and vent hose and remove both rubber hoses from the metal tubes



STEP 2

Disconnect the feed line, return line and electrical connector from the sending unit.

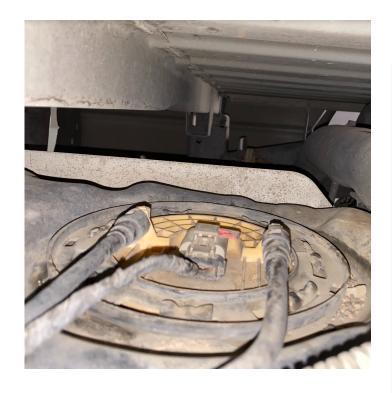

STEP 3

Use a jack to support the tank then use a 16mm socket to remove the nuts from the strap mounting studs.



STEP 4


After the tank has been dropped. Remove the OEM fuel sending unit locking ring from the tank by hitting the

ring counterclockwise. The OEM o'ring won't be used again.



STEP 5

Place the S&B o'ring into the o'ring groove then drop the sending unit into the tank.

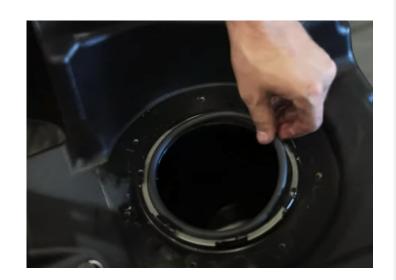

STEP 6

If you are working with the truck on a lift place a jack centered under the tank.
Remove the OEM fuel tank straps. These are 16mm nuts that hold the straps to the studs. When removing the straps from the frame side, you will need to push the



strap up to release the strap from the cradle.

STEP 7

After the tank has been dropped. Remove the OEM fuel sending unit locking ring from the tank by hitting the ring counterclockwise. The OEM o'ring won't be used again.




STEP 8

Place the S&B o'ring into the o'ring groove then drop the sending unit into the tank.




STEP 9

Drop in the OEM sending unit into the S&B Tank. The retaining ring included with the tank will be used.

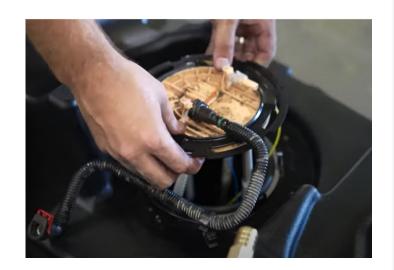

STEP 10

Place the included locking ring over the sending unit flange. First, by pressing down on the ring, get the ring started under the teeth on the tank. Once started, hit the ring clockwise until it passes under the indentation on tank teeth

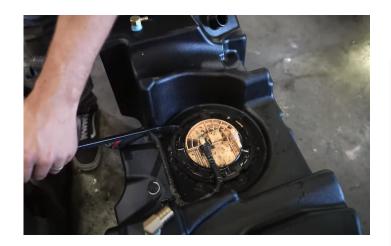

STEP 11

Ensure the locking ring is fully rotated until the rib on the OEM locking ring(point A) is PAST the indentation on the S&B receiving ring(point B).



STEP 12

Poke a small hole in the rubber cap covering the filler spout on the S&B Tank, block off the openings in the tank with electrical tape or cover with fingers, spray the sending unit o'ring area with soapy water and pressure test the tank to make sure the

o'ring was properly seated and there are no leaks in the tank.



STEP 13A

Transfer over the fill hose and put in onto the S&B Tank.

Take the vent hose clamp from the OEM tank and reuse this hose clamp with the S&B vent line.

STEP 13B

Before putting the filler hose onto the tank, place the white check valve into the filler hose with the blue arrow facing into the tank opening

STEP 14A

Lift the tank up into position making sure the vent and fill hose goes over the frame. Then install the front and rear straps. The strap bend on the frame side will need to be straightened out to be able to get the strap hooks into the frame. Push the strap hole through the stud on the driveline side and get the nut started. If the fill and vent lines are over the frame and the electrical connectors are free you are fasten the nuts onto the studs then you are ready to tighten the straps

STEP 14B

Use the end of a rubber mallet or pry bar to pass the strap past the carrier bearing mount

STEP 14C

Tighten the OEM nut to the stud and double check to make sure it is secure (45 ft. lbs).

STEP 15

Reconnect the feed line, return line and electrical connector. Make sure the connectors are locked. To make sure they are locked, gently pull on the connectors

to make sure they won't come off and are locked in.

STEP 16

Reinstall the hose clamps on the fill and vent lines.

STEP 17

Zip tie the S&B front and rear rollover valve hoses to the filler neck. Once this step is complete, you are ready to put fuel into the tank. Please review the checklist below to make sure you did not forget anything and that the tank is installed properly.

STEP 18 FINAL CHECKLIST

This final checklist is very important.


#1 Make sure all nuts are safely fastened and torqued.

#2 Ensure there is proper driveshaft clearance and the straps are tight

#3 Double check fuel line connections, the electrical connection as well as the vent and fill lines.

#4 Lastly, fill the tank full and check for any leaks.

If you have any questions, call or text us at 909.675.1313

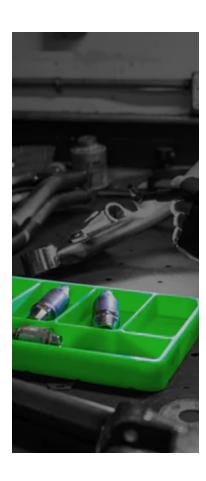

WIN A FREE TOOL TRAY

Sign-up below to receive the latest on product launches, insider tips and more. You'll also be entered into a tool tray giveaway where we choose a new winner every week.

Email Address

Sign Up